 



Models covered: AF1013F, AF1515MF, AF1015/18, AF2015/18, AF2016/20, MP161SPF, MP1500/1600Le/2000Le

Daylight Savings Time is crucial for a device with a fax option which uses time delay features, or for those who use the fax date and time as proof of a communication time when printed on a received document. It is also a requirement in order to view the correct time on the operation panel and the file name of scanned documents.


1. Press the “**User Tools/Counter**” key.

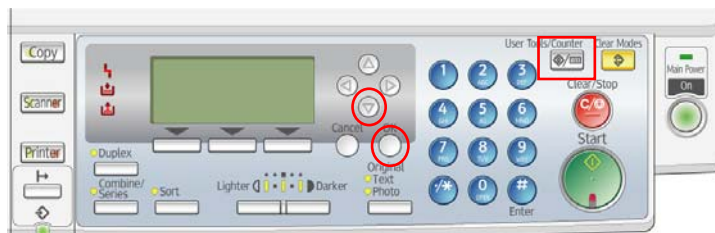

 
2. Press the **down arrow** key to highlight **System Settings** and press the “**OK**” key.

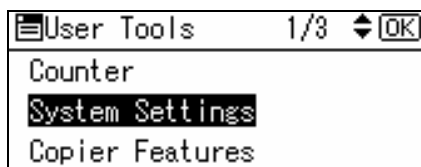

3. Press the **down arrow** key to highlight **Timer Settings** and press the “**OK**” key.

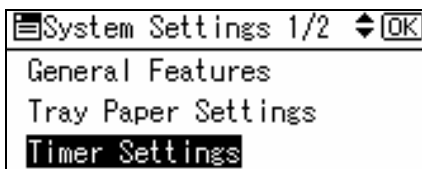


4. Press the **down arrow** key to highlight **Set Time** and press the “**OK**” key.

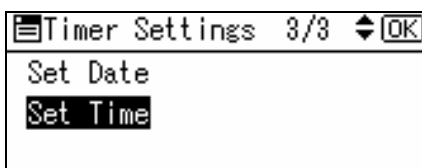

5. Add one hour to the current time and enter the hour value using the numeric key pad and press “**OK**”.

e.g current time is 11.37, enter 12

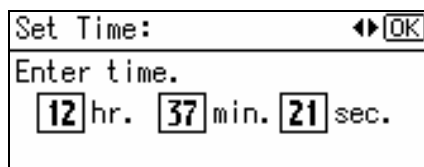

6. Press the “**User Tools/Counter**” key to exit from User Tools, you should now see the normal copy screen and the process is complete.

