 



Models covered: AF1022/27, AF1035/45, AF1060/75, AF1224/32, AF2022/27, AF2035/45, AF2060/75, AF2228/32/38, AF3025/30, AF3035/45, AF3224/32, AF3228/35/45

Daylight Savings Time is crucial for a device with a fax option which uses time delay features, or for those who use the fax date and time as proof of a communication time when printed on a received document. It is also a requirement in order to view the correct time on the operation panel and the file name of scanned documents.


1. Press the "User Tools/Counter" key.

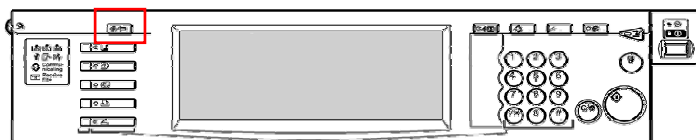

 2. Press **System Settings**.

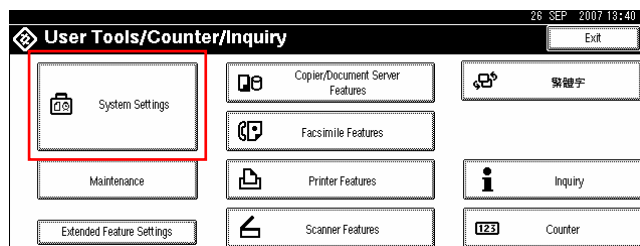


3. Press **Timer Settings** and **Set Time**.

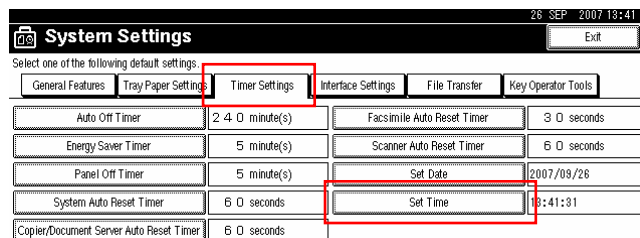

4. Add one hour to the current time and enter the hour value using the numeric key pad and press "OK".

e.g current time is 12.42, enter 13

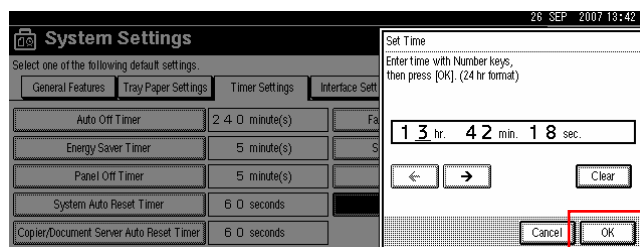

5. Press the "User Tools/Counter" key to exit from User Tools, you should now see the normal copy screen and the process is complete.

