


SP 3510DN

QUICK GUIDE





CONTROL PANEL <i>An overview of the function buttons.</i>	Page 1
REPLACING TONER <i>The process for replacing toner cartridges.</i>	Page 2
PAPER JAMS – STANDARD TRAY <i>Remove paper jammed in the paper tray.</i>	Page 4
PAPER JAMS – INTERNAL <i>Remove paper jammed at the front of the device.</i>	Page 5
PAPER JAMS – DUPLEX UNIT <i>Remove paper jammed at the rear of the device.</i>	Page 6

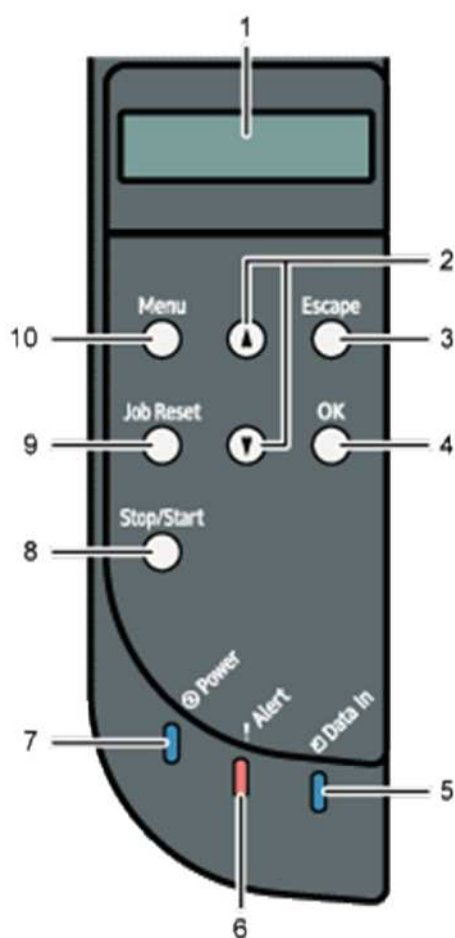

09M0010

1.Display

Displays current printer status and error message.

You can set the display up with your hands. Adjust the angle of it to see clearly.

2.Scroll Keys

Press to move the cursor in each direction, step by step.

3.[Escape] key

Press this key to cancel an operation or to return to the previous display.

4.[OK] key

Press this key to confirm settings and setting values, or move to the next menu level.

5.Data In Indicator

Flashes when the printer is receiving data from a computer. The data indicator is lit if there is data to be printed.

6.Alert Indicator

Lights up in red whenever printer error occurs. Use display to check the error.

Flashes in yellow when toner is nearly empty.

7.Power Indicator

Remains lit while the power is on. It is unlit when the power is off.

8.[Stop/Start] key

If you press this key, the printer stops receiving data, and printing is not possible.

9.[Job Reset] key

Press this key to cancel a job that is printing out.

10.[Menu] key

Press this key to make and check the current printer settings.

Press the [Menu] key again to return to the ready condition.



- 1 Do not touch the print cartridge's photo conductor unit.




- 2 Do NOT touch the ID chip on the side of the cartridge.



- 3 Push the side button to release the front cover, and then lower it gently.




- 4 Carefully pull out the print cartridge horizontally.

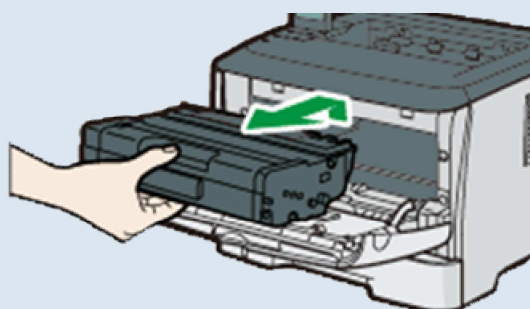





- 5** Take the new cartridge out of the box, and then remove it from the plastic bag.

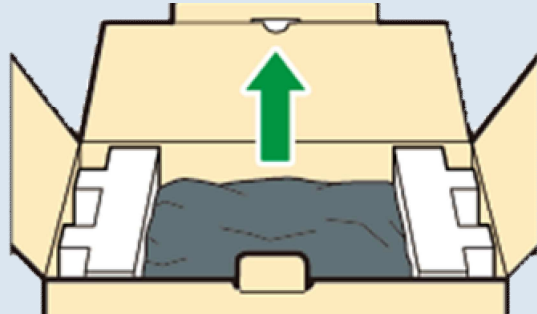


- 6** Place the print cartridge on a flat surface, and then remove the protection sheet.

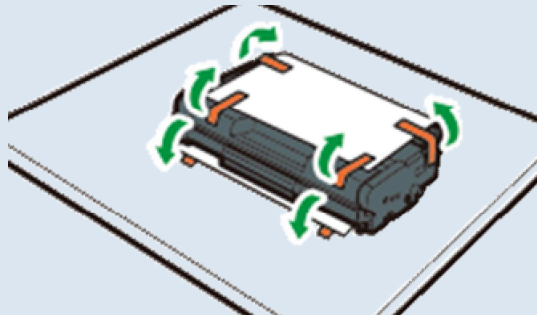

- 7** Hold the print cartridge and shake it from side to side five or six times.

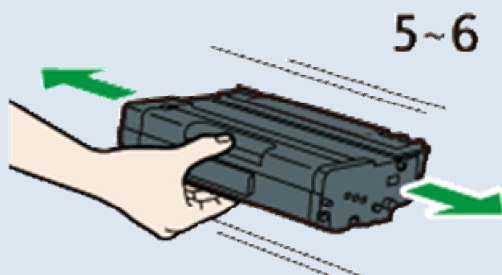


- 8** Slide the cartridge in horizontally. Raise it slightly and push it fully in. Then push down until it clicks into place.

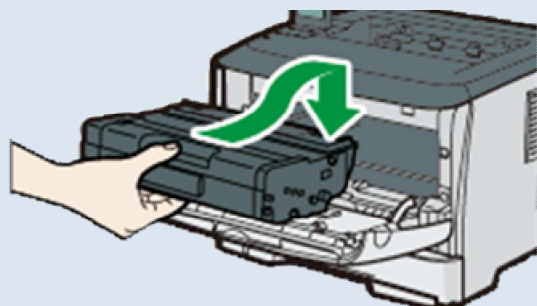




1

Pull tray 1 out completely using both hands, and place to one side.

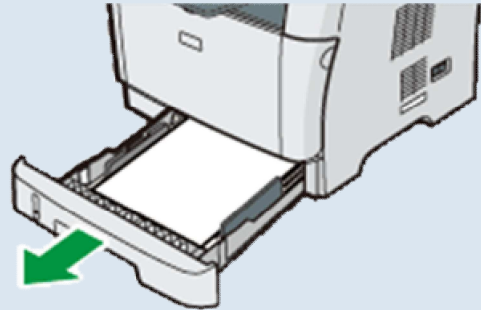


2

Push the lever. This will lower the duplex transport unit.

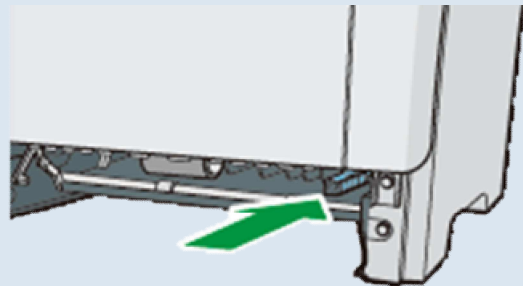


3

Remove any jammed paper.

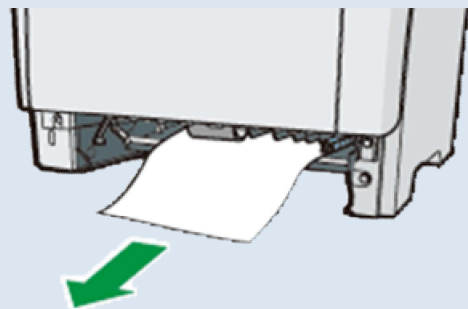


4

With the duplex transport unit still lowered, carefully slide tray 1 back in until it stops.

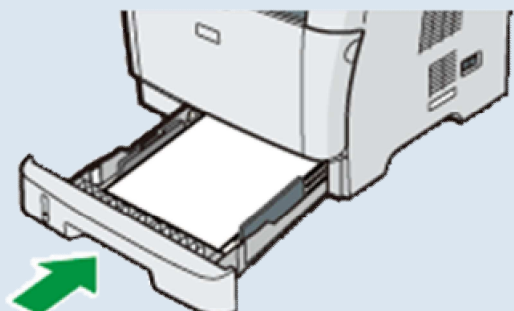





- 1 Push the side button to release the front cover, and then lower it gently.

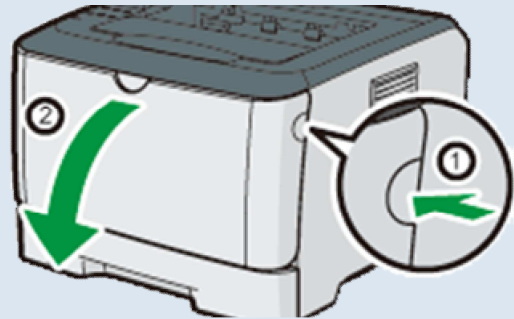


- 2 Carefully pull out the print cartridge horizontally.

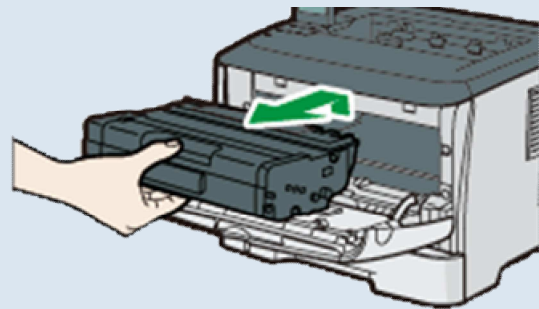

- 3 Lifting the guide plate, remove the jammed paper carefully.

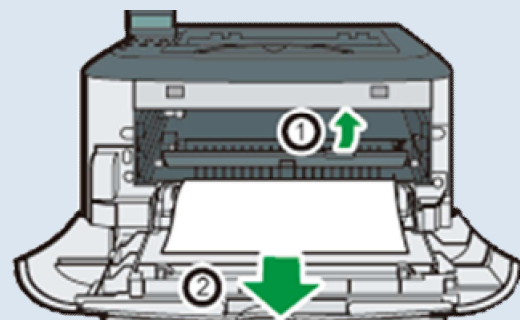


- 4 Slide the cartridge in horizontally. Raise it slightly and push it fully in. Then push down until it clicks into place.

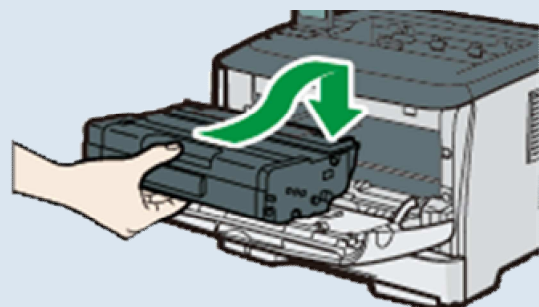





- 1 Open the rear cover.

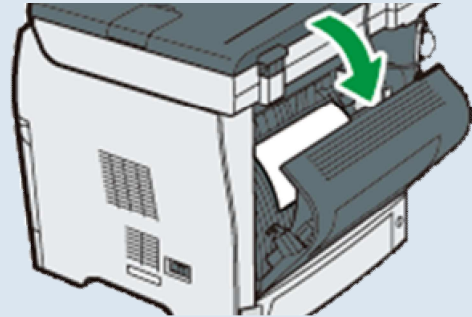


- 2 Carefully remove any jammed paper.

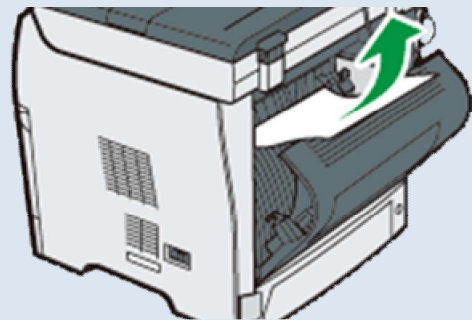

- 3 Close the rear cover.

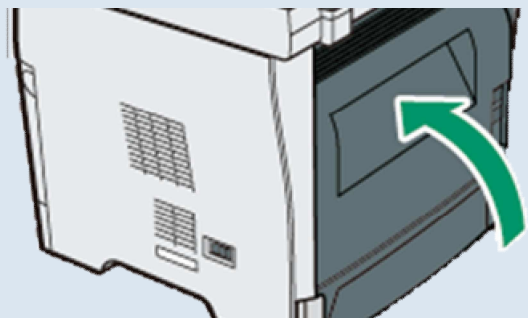

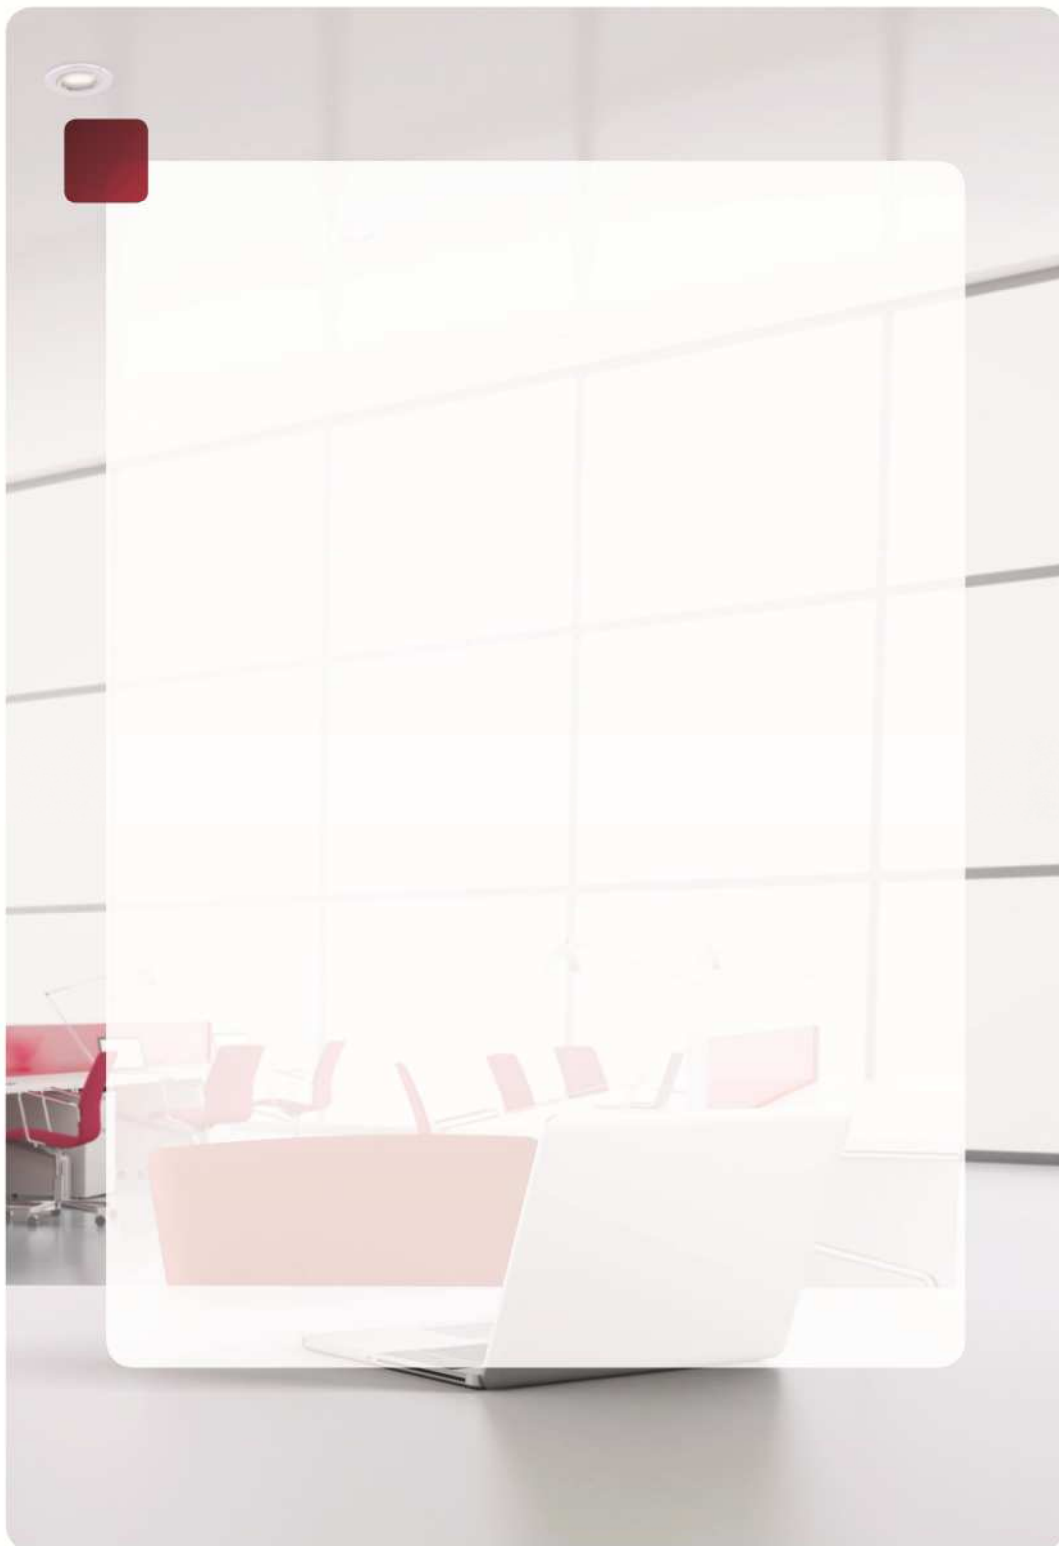

RICOH
imagine. change.

RICOH NZ LTD
60 Stanley Street, Parnell, Auckland
Tel: 0800 807676